

NEC IP Phone Programming Instructions - General

SELECT	DESCRIPTION
Menu	
0	
Password	"6 o'clock" position on the outer ring of the multi-purpose dial
6633222	
OK	
1 Network Settings	1 on the keypad
1 DHCP Mode	1 on the keypad
2 Enable	2 on the keypad
OK	
6 Advanced Settings	6 on the keypad
1 LAN Port Settings	1 on the keypad
2 VLAN Mode	2 on the keypad
2 Enable	2 on the keypad >> This value is not the same for all systems. ¹
OK	
3 VLAN ID	3 on the keypad
2	digit on keypad >> This value is not the same for all systems. ¹
OK	
4 VLAN Priority	4 on the keypad
6	digit on keypad >> This value is not the same for all systems. ¹
OK	
Exit	
Exit	
Exit	
2 SIP Settings	2 on the keypad
1 SIP User	1 on the keypad
3 Extension Number	3 on the keypad
####	digits on keypad >> This value is unique for the extension. ²
OK	
Exit	
2 Server Address & URI	2 on the keypad
1 1st Server Address	1 on the keypad
###*###*###*###	digits/character on keypad >> This value is unique for this system. ¹
OK	
Exit	
4 SIP Server Port	4 on the keypad
1 1st Server Port	1 on the keypad
5080	digits on keypad
OK	
Exit	
Exit	
Save	after a few moments, the screen should go blank as the phone is rebooting
¹ Check with a working phone, and use the same values ² When a phone is replaced, use the same extension as before. For a new extension, see the administrator.	